

Pressure Sprayers



Technical data

Type of device	Max. filling quantity	Recommended fill quantity	Total contents	Max. pressure	Temperature	Weight when empty	Material of tank
3132 FE / FO	1.5 l	1.25 l	2.0 l	3 bar	30 °C	510 g	Polyethylene

Welcome and congratulations

for purchasing your new FOAMER. Thank you for the trust you have shown in our brand.

Please read these instructions for use carefully before using the device and keep them in a safe place.

Intended usage

The **FOAMER 3132 FO, 3132 FE** are intended for foaming of cleaning agents, which are recommended for use of the substance manufacturers. Please observe the substance manufacturer's safety data sheet. Not suitable for, and not to be used under any circumstances for:

- Highly flammable and flammable liquids
- Solvents and liquids containing solvents
- Highly viscous or sticky liquids or liquids that leave residue which cannot be completely rinsed out of the device.

Products other than those as well as usage for purposes excluded above are not in conformity with proper use.

The manufacturer shall not be liable for any resulting damage or for unauthorized modifications to the device.

Your safety

Do not leave the devices in the sun.

Check each time before using:

- Are all parts that are under pressure and convey liquids free of damage?
- Are those parts functioning properly?

Replace devices that are damaged or not functioning properly immediately.

Follow the spray manufacturer's instructions.

Do not leave under pressure for an extended period of time.

Never direct foam at persons, animals or bodies of water.

Do not unscrew the pump from the tank when device is under pressure.

Do not blow through clogged nozzles or valves with your mouth.

Making the device ready for use

- Turn the pressure release valve on the side until the pressure is released from the tank.
- Unscrew the pump from the tank.
- Add the spraying liquid to the tank.
- Where appropriate, add cleaning media.
- Screw the pump tightly onto the tank.
- Generate pressure in the tank by activating the pump (max 50 pump strokes).

Use

- Align the foam nozzle to the area to be sprayed with a distance of approx. of 50 / 70 cm.
- For foaming activate the lever on the pump.
- By releasing the lever, the foaming process is interrupted.
- The foam nozzle does not need to be set.

After usage

- Turn the pressure release valve on the side until the pressure is released from the tank.
- Unscrew the pump from the tank.
- Do not pour residue down the drain!
- Dispose of the residue according to the recommendations of the substance manufacturer.